 
 


INSTRUCTION MANUAL



Femke WL 1 Black Lux
104086

<p>1.</p>	<p>2.</p>	<p>3.</p>
<p>4.</p> <p>INCOMING SUPPLY</p> <p>LIVE (Brown or Red) ————</p> <p>EARTH (Green & Yellow) ————</p> <p>NEUTRAL (Blue or Black) ————</p> <p>TO FITTING</p> <p>LIVE</p> <p>EARTH</p> <p>NEUTRAL</p>	<p>5.</p>	<p>6.</p>
<p>7.</p>	<p>Important: Product must be installed by a qualified electrician</p> <p>Automatic: Fitting will operate on and off automatically at dusk and dawn.</p> <p>Time Delay: Fitting incorporates a time delay to prevent accidental trigger operation by car headlight and flashes. Pre-set 15-30sec delay to avoid false trigger (approx.).</p> <p>Ambient Light: 5~45Lumen (approx.).</p> <p>* Avoid a position where direct light from another source can fall on the control. Position out of direct sunlight if possible (not essential).</p>	
<p>Overall Size:</p>		