


INSTRUCTION MANUAL

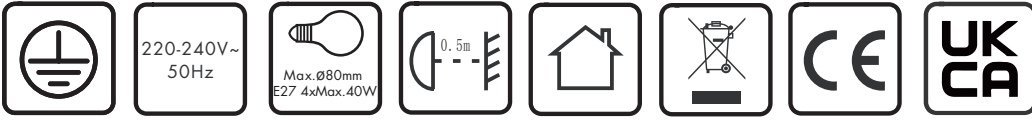

Elva HL 5 Bronze Smoke Long
105866

| | | |
|---|-----------------------|-----------|
| <p>1.</p> | <p>2.</p> | <p>3.</p> |
| <p>4.</p> <p>INPUT: AC220-240V~50Hz</p> | <p>5.</p> | <p>6.</p> |
| <p>7.</p> | <p>Overall Sizes:</p> | |