


INSTRUCTION MANUAL

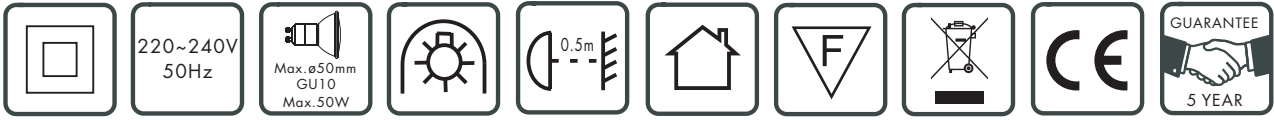

Rondoo DL

| | | |
|------------------------------------|---|--|
| <p>1.</p> <p>OFF</p> | <p>2.</p> <p>ø88mm</p> | <p>3.</p> |
| <p>4.</p> <p>INPUT: AC220~240V</p> | <p>5.</p> <p>FREE SPACE ±10cm</p> | <p>6.</p> <p>Warning: When replacing a halogen lamp, wait for it to cool, for a minimum of 5 minutes</p> |
| <p>7.</p> <p>ON</p> | <p>Overall Sizes:</p> <p>43mm ø104mm 30</p> | |