
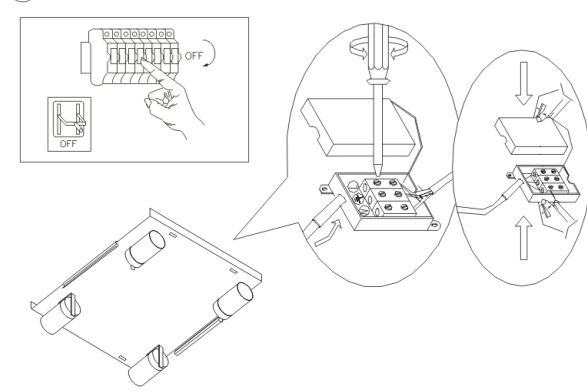
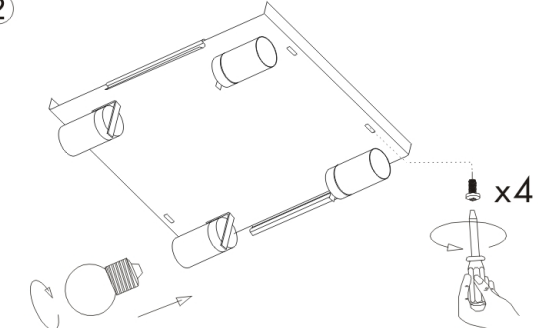
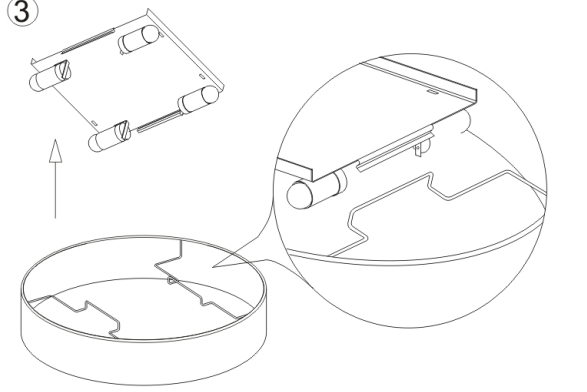
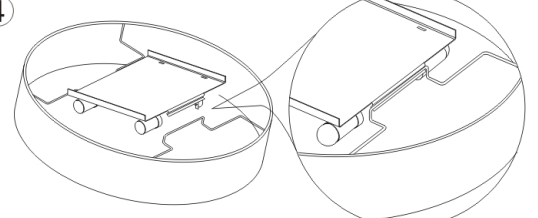
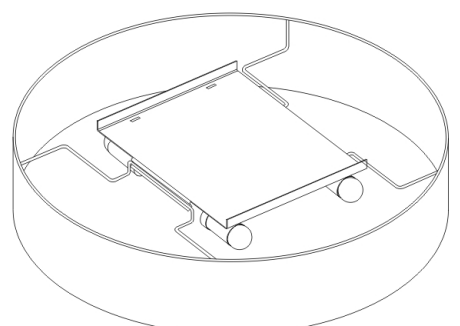
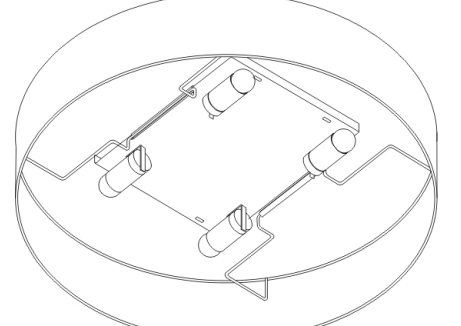
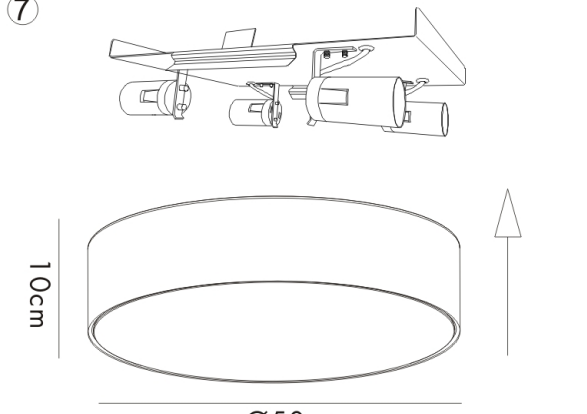


# INSTRUCTION MANUAL

Drum CL Eco 50/Drum CL Eco 60

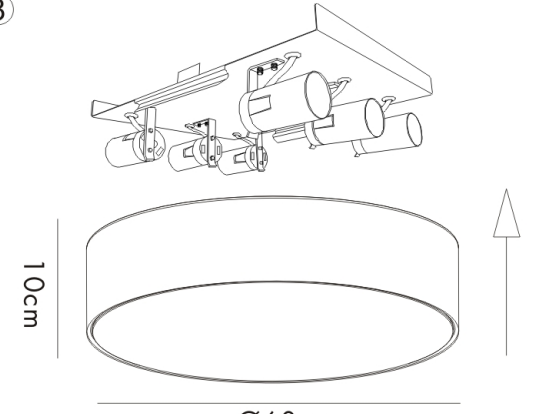

<p>①</p> 	<p>②</p>  <p>Suitable Light Source: E14, Halogen Max 28W E14, ESL Max 12W</p>
<p>③</p> 	<p>④</p>  <ol style="list-style-type: none"><li>1. clip the one arm of the shade on one side of the ceiling plate</li><li>2. stretch a little bit of the shade to reach the other side of the ceiling plate</li><li>3. clip the shade on the other side of the ceiling plate</li></ol> <p>remarks: please make sure the shade arm is clipped on the outside curve of the ceiling plate, but not inside curve of the ceiling plate</p>
<p>⑤</p> <p>view from the top</p> 	<p>⑥</p> <p>view from the bottom</p> 
<p>⑦</p>  <p>10cm</p> <p>Ø50cm</p>	<p>⑧</p>  <p>10cm</p> <p>Ø60cm</p>