




INSTRUCTION MANUAL

Solaris WL Alu PIR
91933

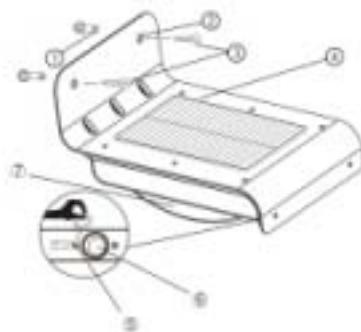

- (1) Expansion pillar-hinge
- (2) Hole
- (3) Screw
- (4) Solar panel
- (5) On/Off Switch hole
- (6) PIR motion inductor
- (7) LED panel light

Working process instructions

To use supplied key pin
to unlock the system



Then screw on the wall by the
supplied screws




Step1: Charging under sun in
daytime around 7 hours



Step2: Dim light in dark/at
night auto night sensor



Step4: People move away, turn to
dim light again to save power

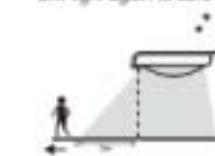

Step3: Bright light at night when
people come close auto bright



WWW.QAZQA.COM

QAZQA