

"INSTRUCTION MANUAL"



Cortin FL Tripod Grey Wash with Nickel 96519

Assembly Instructions
Instrucciones De Asamblea
Instructions d'Assemblée

PARTS



A



B

For indoor use only. Keep out of the reach of children and animals. Place on flat surface and away from flammable materials. Never operate this appliance if it has a damaged cord, plug or cable. Keep cord away from heated and/or damp areas

CAUTION! Only use Type A 40 Watt bulb or CFL equivalent

1

Place Lamp in room and adjust left to right.
Tighten screw firmly. See inset below.

Screw in light bulb.
Plug in electrical
cord. Turn switch
ON to test. Close
Grill and tighten
securely.

*Tighten



*Tighten



QAZQA

WWW.QAZQA.COM