


INSTRUCTION MANUAL

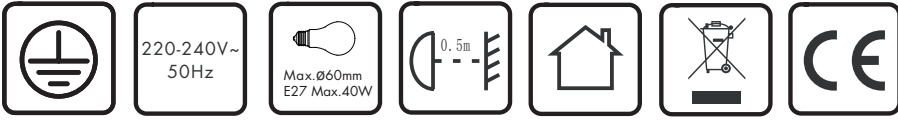

Cage Robusto WL Silver
99094

<p>1.</p> <p>OFF</p>	<p>2.</p>	<p>3.</p>
<p>4.</p> <p>INPUT: AC220-240V~50Hz</p>	<p>5.</p>	<p>6.</p>
<p>7.</p> <p>ON</p>	<p>Overall Sizes:</p>	