


INSTRUCTION MANUAL

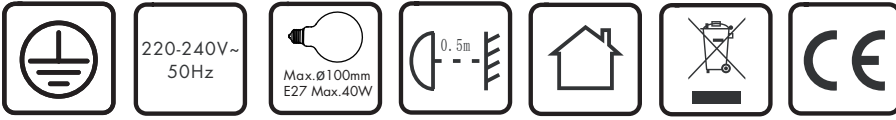

Cage Robusto HL Silver 5 99100

<p>1.</p>	<p>2.</p>	<p>3.</p>
<p>4.</p> <p>INPUT: AC220-240V~50Hz</p>	<p>5.</p>	
<p>6.</p>	<p>Overall Sizes:</p>	