


Twingo DL 1 White


91114

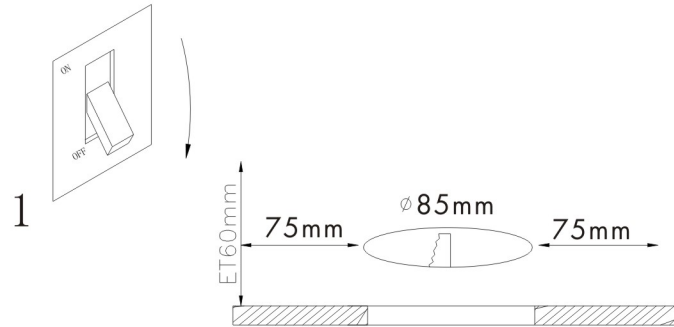

1. Switch off the power before installation.
Ensure the height of installation has at least 60mm.
Making a hole with dia.85mm in the ceiling .



2. Connect the wire according to the drawing

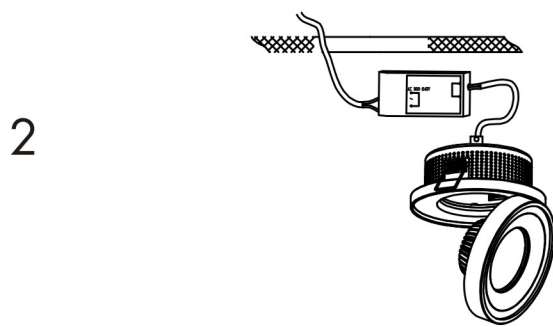

3. Put the LED driver and wire inside of the ceiling .
Push the spring on both two sides up, put the LED lamp inside of the ceiling .

