


Twingo DL 1 White

91115




1. Switch off the power before installation.
Ensure the height of installation has at least 90mm.
Making a hole with dia.98mm in the ceiling .

1

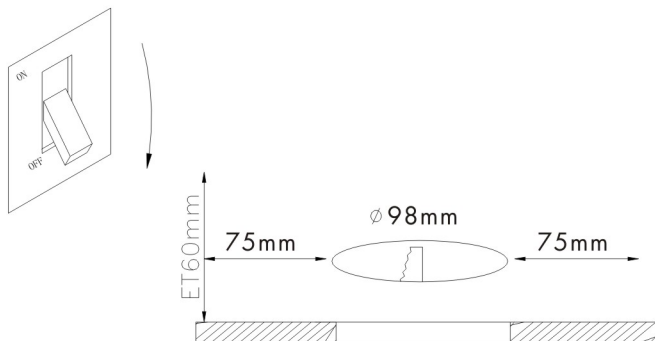

2. Connect the wire according to the drawing

2

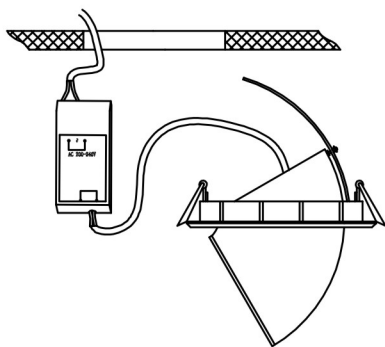

3. Put the LED driver and wire inside of the ceiling .
Push the spring on both two sides up, put the LED lamp inside of the ceiling .

3

