Suchin WL Natural Shade S15 Brown
89700

1、Before installation disconnect the mains supply.Take out the plate from the fixture and position on the wall.(see item in drawing 1).

1

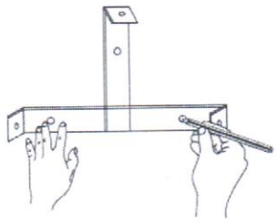

2、Drill at the ceiling to make a hole to be match with the hook .

2

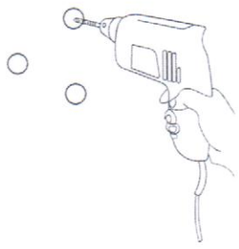

3、Screw the hook with the hole and ensure it is attach with the celing tightly.

3

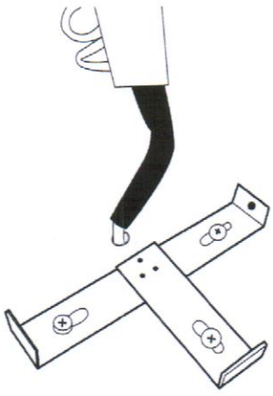

4

4、Hang the wall lamp with the hook.

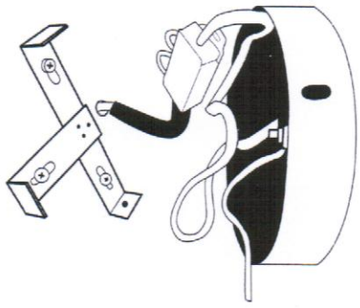

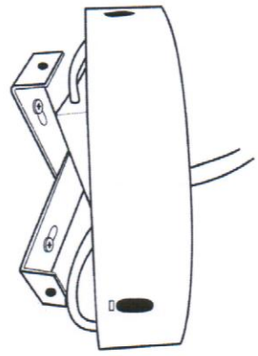

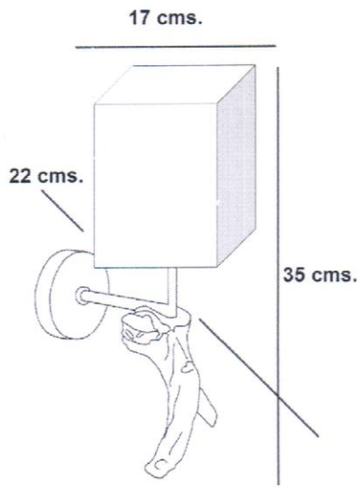

QAZQA

WWW.QAZQA.COM